KITCHEN SINK STRAINER

Cat. No.
I5585

BARCLAY

INSTALLATION INSTRUCTIONS

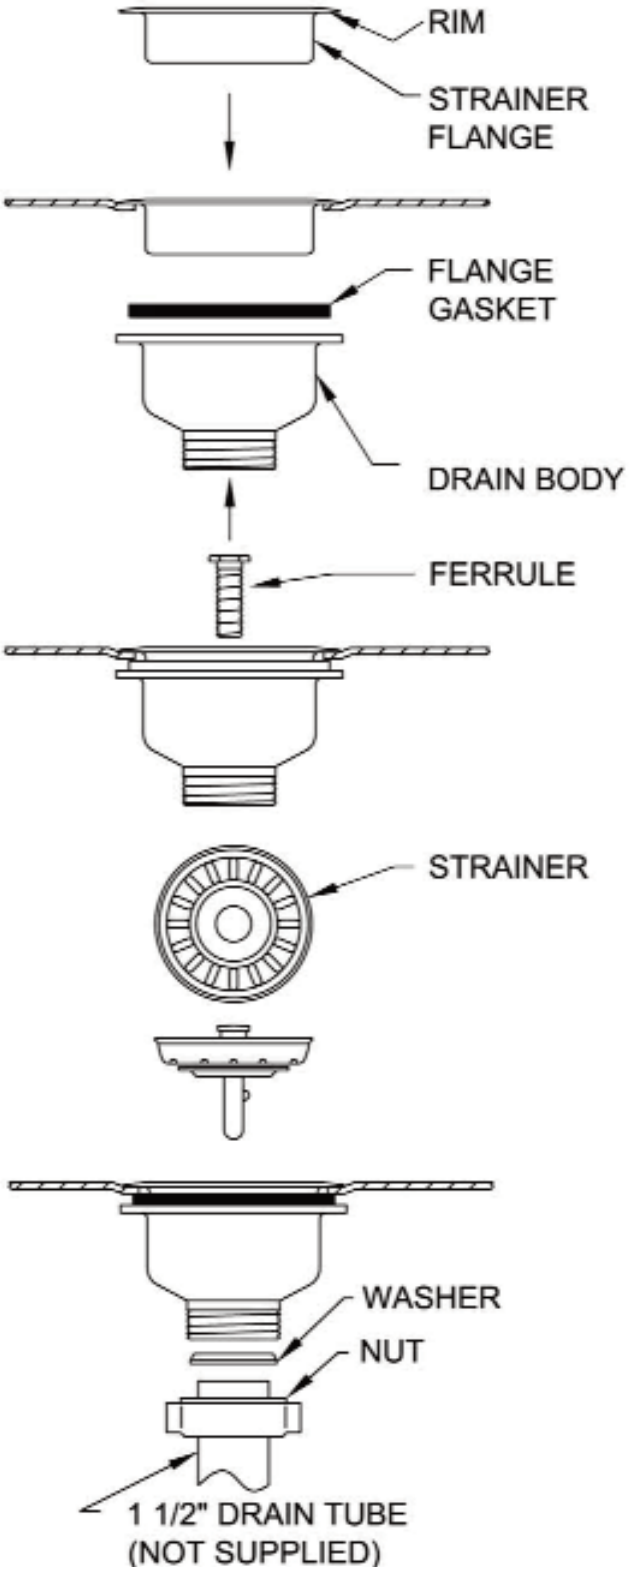

1. APPLY A SMALL AMOUNT OF NON-ACID SILICONE UNDER THE RIM OF STRAINER FLANGE AND PUSH DOWN INTO SINK
2. LUBRICATE FLANGE GASKET WITH WATER, PLACE INTO LIP OF DRAIN BODY AND POSITION DRAIN BODY ON THE SINK BOTTOM
3. LINE UP RIBS IN DRAIN BODY AND STRAINER FLANGE THEN SCREW IN FERRULE. **CAUTION**: HAND TIGHTEN THEN 1/4 TURN WITH SMALL SCREW DRIVER. DO NOT OVER TIGHTEN
4. PUSH STRAINER INTO FERRULE IN DRAIN BODY
5. SLIDE NUT ON 1 1/4" DRAIN TUBE, PLACE WASHER ON DRAIN TUBE SMALL DIAMETER UP. PUSH TUBE INTO DRAIN BODY AND **HAND** TIGHTEN THE NUT. TEST FOR LEAKS.

FINISH CARE AND MAINTENANCE

DO NOT USE ANY HARSH ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN, USE ONLY A DAMP SOFT CLOTH. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY.

WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.